



Solar Light Houses Instruction Manual


D9838 D9839 G0825

General information and safety warnings

- Keep away from children.
- Do not submerge in water.
- When disposing of batteries please ensure they are correctly recycled.
- Do not mix old and new batteries. Mixing old and new batteries could cause leakage of caustic acid that could cause skin burns and damage materials it contacts.
- When installing batteries, observe correct polarity.
- Requires 1 x AA 1.2v 300mH Ni-MH battery (included).
- Keep batteries out of the reach of children.
- Wear gloves and use caution when removing leaking batteries. Make sure you dispose of batteries at your local recycling centre.
- **Note: The solar panel must be placed in a well-lit location for maximum sunlight absorption. Anything that shades the panel will affect the brightness and lighting duration. At least 6 hours (preferably 10-12 hours if possible) of sunlight is required for the lights to illuminate.**
- **Remember!** During winter months charging time will be reduced due to the limited daylight hours.
- Not suitable for commercial purposes.

Before first use

- Remove the light from packaging. Store or dispose of packaging in the correct manner.
- Unscrew the top of the light house anti clockwise as shown in the image below.
- Turn it over and locate the battery compartment.
- Gently pull the plastic tab out which is sticking out of the battery compartment.
- Turn the ON/OFF button to ON.
- Return the top of the light house to the base and secure by turning clockwise.
- **Note: The solar panel must be placed in a well-lit location for at least 6 hours to charge the battery.**

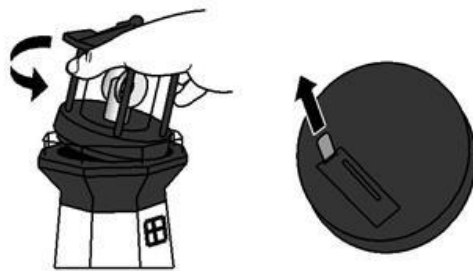

Please note: The top will continue to spin for some time after the light has been turned off.

GUARANTEE

IMPORTANT

Please do not return this product without first calling the Customer Service number below:

0871 911 7031*

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

Register your product for an extended 2-year warranty by visiting our website www.gardengearonline.co.uk. The product must be registered, along with your contact information, within 30 days of purchase. For full terms and conditions please visit our website.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee.

Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre.

Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

After Sales Customer Service: Customer Service Department, Branded Garden Products Ltd, Premier House, Hortonwood 7, Telford, TF1 7GP, UK
Telephone: 0871 911 7031*

E-mail customerservice@gardengearonline.co.uk

Please retain for future reference.

Colours and contents may vary.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Please note that all products with the symbol below must be recycled.



Calls cost 13p per minute, plus your phone company's access charge