

Battery Powered Cat Repeller Instruction Manual

G0461 G3635

The cat repeller is designed to send out ultrasonic sounds to scare cats away from areas where they cause a nuisance.


This product could possibly take up to 30 days to deliver its full deterrent effect. This is because the cat may have become accustomed to visiting the area in question and it might take some time to change the habitual pattern of visiting. However, after time, the cat will find the noise unbearable and will stop visiting. You might need to move the repeller on occasion to find the most effective position.

Safety

- Keep the repeller away from children. Young children can be especially sensitive to ultrasonic soundwaves.
- Do not submerge in water.
- When disposing of batteries, please ensure that they are correctly recycled at your local recycling centre.
- Do not mix old and new batteries. Mixing old and new batteries could cause leakage of caustic acid, which can cause burns and damage materials it comes into contact with.
- When installing batteries, observe correct polarities.
- Keep batteries out of the reach of children.
- Wear gloves and use caution when removing leaking batteries.

Parts list

1. Speaker 2. PIR sensor 3. On/off switch 4. Ground spike assembly

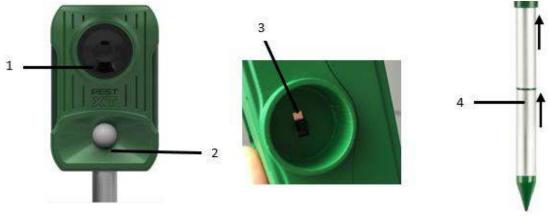

Specifications

Power Supply: 3 X AA alkaline batteries (not included)

Working current: 27mA, 0.16W Frequency: 22-25kHz

Coverage: 8 metres, 110 degrees

Installing the batteries

The product is powered by 3 X AA alkaline batteries (not included). To install the batteries, unscrew the 4 retaining screws. Lift the battery compartment cover off and insert the batteries, observing the correct polarity and replace the cover.

Where to position

Place the repeller in a position where cats have been active; for example, along paths, entrances or around flower beds. The ultrasonic soundwaves travel in straight lines so do your best to avoid any solid obstructions. Choose a position where the unit will not get submerged during heavy rain.

Installing the ground spike

Use the metal spike pushed into the ground at a depth of 11 centimetres. The ideal height is between 13 and 35 centimetres where it will detect cats that move within range of 8 metres and a radius of 110° degrees.

Before inserting the spike into the ground check the surface. Frozen soil, or waterlogged ground is not suitable. Dig a hole into solid earth to soften the soil and remove any rocks or obstacles then push into the soil and firm with your foot.

Operating

Turn the repeller on at the ON/OFF switch, this activates it in standby mode. If the sensor detects movement, it emits a sound for 5 seconds and then returns to standby mode. There will be a red light inside the PIR sensor to show that it is working.

Maintenance

To clean the unit, use a damp, soft cloth and mild soapy water. Do not use harsh or abrasive cleaning agents which may damage the unit.

Do not immerse the repeller in water and if there is the likelihood of deep snow or floods bring the unit indoors, remove the batteries and store in a cool dry place.

Caution: Some people, especially the young, can hear part of the range which the product emits – this can cause discomfort. This also applies to domestic pets so bear this in mind when positioning the product.

GUARANTEE

IMPORTANT

Please do not return this product without first calling the Customer Service number below:

0871 911 7031*

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee.

Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre.

Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

After Sales Customer Service:

Customer Service Department, Branded Garden Products Ltd, Premier House, Hortonwood 7, Telford, TF1 7GP, UK

Telephone: 0871 911 7031*

E-mail <u>customerservice@gardengearonline.co.uk</u>

Please retain for future reference.

Colours and contents may vary.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Please note that all products with the symbol below must be recycled.



*Calls cost 13p per minute, plus your phone company's access charge