

## Bird Feeding Station Instruction Manual – G1357




For correct usage, please read all instructions carefully before use and retain for future reference.

- Position the bird feeding station in soft ground.
- For stability ensure the pole is inserted at least 30cm into the ground.

### List of parts

- 4 metal poles
- 2 top sections with hooks
- 2 seed dispensers
- 1 nut dispenser
- 1 dispenser for fat balls
- 2 trays
- 1 set of hooks

1. Assemble the pole, ensuring the pole with the longest recess is used at the top of the bird feeder.

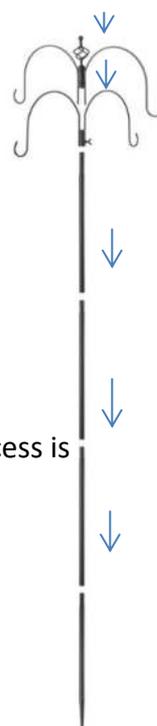



Use this pole at the top

2. Slide the two double-hook units onto the top of the top pole; tighten the screws to secure.

To attach the brackets for the trays and hooks:

- a) Hold the bracket sideways against the pole.



- b) Wrap the bracket around the pole by tilting the bracket 45° and turning anticlockwise, then push rubber end behind the pole.



- c) The bracket should now be secure. If you want to reposition the bracket, tilt the holder back to a 45° angle and adjust.



### **Cleaning your bird feeder**

To prevent the spread of infections among garden birds, it is very important to clean your bird feeder on a regular basis. Bacteria and fungal spores can develop quickly on bird feeders, bird tables and in bird baths, so regular cleaning can help prevent this. Please also move your bird feeder around the garden to prevent a build up of disease in any one area.

### **How to clean your bird feeder**

1. Wearing rubber gloves, empty the feeder and dispose of the content in a bin. Do not reuse the food or compost it.
2. Thoroughly clean the feeder with a brush in hot soapy water. Ensure all residual food and droppings are removed.
3. Rinse the feeder with cold water from an outside tap and leave to stand to dry completely.
4. Finally, spray the feeder with a veterinary disinfectant, which should kill any remaining infections. Rinse the feeder again and allow to dry naturally before refilling.

## **GUARANTEE**

### **IMPORTANT**

**Please do not return this product without first calling the Customer Service number below:  
0871 911 7031\***

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee.

Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre.

Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

#### **After Sales Customer Service:**

Customer Service Department, Branded Garden Products, Premier House, Hortonwood 7, Telford, TF1 7GP, UK

Telephone: 0871 911 7031\*

E-mail [customerservice@gardengearonline.co.uk](mailto:customerservice@gardengearonline.co.uk)

Please retain for future reference.

Colours and contents may vary.

\*Calls cost 13p per minute, plus your phone company's access charge.