



Heated Propagator Instruction Manual

KB4291

General information and safety warnings

- Only to be used in accordance with these instruction manuals.
- Always unplug your propagator from the mains before carrying out any cleaning or maintenance.
- Always unplug your propagator from the mains before moving it.
- Do not touch the plug or cable with wet hands.
- Make sure that the voltage of the propagator corresponds with the power voltage available.
- Keep out of reach of children and pets at all times.
- Suitable for indoor use only.
- Not suitable for commercial purposes.

Instructions for use

1. Sow one or two seeds in each cell of the modular tray, using a good quality seed compost. Plug the propagator in and switch the plug on.
2. Water sparingly and open the vent if condensation persists inside the lid.
3. Once the majority of plants germinate move to a sunny windowsill and remove the lid. Thin seedlings to one per cell.
4. Transplant your seedlings into 9cm pots when large enough to handle and grow on for a few weeks to fully establish.
5. Gradually acclimatise plants to cooler outside conditions for 7-10 days, keeping them protected at night-time, before planting into their final positions.

**GUARANTEE
IMPORTANT**

**Please do not return this product without first calling the Customer Service number below:
0871 911 7031***

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. Register your product for an extended 2-year warranty by visiting our website www.gardengearonline.co.uk. The product must be registered, along with your contact information, within 30 days of purchase. For full terms and conditions please visit our website.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee.

Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre. Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

After Sales Customer Service:

Branded Garden Products Ltd, Premier House, Hortonwood 7, Telford, TF1 7GP
Telephone: 0871 911 7031*

E-mail customerservice@gardengearonline.co.uk

Please retain for future reference.

Colours and contents may vary.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Please note that all products with the symbol below must be recycled.



*Calls cost 13p per minute plus your phone company's access charge