

## Solar Houses Instruction Manual

G4106 G4107 G4108 G4692 G4693

### Safety

- Keep away from children.
- Do not submerge in water.
- Requires 1x 1.2V AA 300mAh Ni MH battery in each house (included).
- When disposing of batteries please ensure they are correctly recycled.
- Do not mix old and new batteries. Mixing old and new batteries could cause leakage of caustic acid that could cause skin burns and damage materials it contacts.
- When installing batteries, observe correct polarity.
- Keep batteries out of the reach of children.
- Wear gloves and use caution when removing leaking batteries. Make sure you dispose of batteries at your local recycling centre.
- Not suitable for commercial purposes.

### Instructions for use

- Turn the on/off switch to the on position on the bottom of the house.
- Place the lights in the desired position.
- Ensure it is in a sunny location away from any other artificial light sources; allow at least 8-12 hours to charge.
- The light will automatically turn on at dusk and will turn off at dawn.

**Note:** The house must be placed in a well-lit location for maximum sunlight absorption. Anything that shades the panel will affect the brightness and lighting duration. At least 6 hours of sunlight is required for the lights to illuminate. Remember - during winter months charging time will be reduced due to the limited daylight hours.

### Cleaning and maintenance

Wipe clean with a soft damp cloth as and when required to remove surface dust and debris. A dirty solar panel will inhibit the charging and will reduce the amount of usage time.

**GUARANTEE  
IMPORTANT**

**Please do not return this product without first calling the Customer Service number below:  
0871 911 7031**

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

Register your product for an extended 2-year warranty by visiting our website [www.gardengearonline.co.uk](http://www.gardengearonline.co.uk). The product must be registered, along with your contact information, within 30 days of purchase. For full terms and conditions please visit our website.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee.

Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre.

Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

**After Sales Customer Service:**

Customer Service Department, Branded Garden Products Ltd, Premier House, Hortonwood 7, Telford, TF1 7GP, UK

Telephone: 0871 911 7031

E-mail [customerservice@gardengearonline.co.uk](mailto:customerservice@gardengearonline.co.uk)

Please retain for future reference.

Colours and contents may vary.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

**Please note that all products with the symbol below must be recycled.**



Calls cost 13p per minute plus your phone company's access charge